

Voice Encryptor

CRYMOBILE-200

For VHF/UHF Portable Transceiver

User's Manual

Document No : D003005

Contents

Configuration and Installation	2
How To Use.....	4

1. Configuration and Installation

1) Configuration

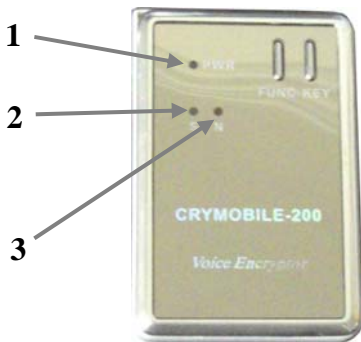


Fig.1. Front of CRYMOBILE-200

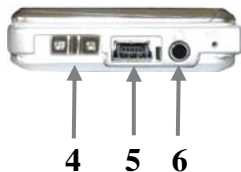


Fig.2. Top of CRYMOBILE-200

- 1 – [PWR] LED : Indicate power supply status.
- 2 – [S] LED : Indicate normal status of device.
- 3 – [N] LED : Indicate Encrypted dialogue status.
- 4 – Power Switch : Power switch.
- 5 – RS-232C Port : Battery charge or local control.
- 6 – Earset with PTT and MIC(attached).

2) Installation

- Connect between transceiver and CRYMOBILE-200 using the supplied ACC cable.
- Insert the earset with PTT and MIC into ear.



Fig.3. Assemble of CRYMOBILE-200

2. How To Use

- 1) Power on.
Then [PWR] LED lights up green color and [S] LED lights up red color.
- 2) Push and hold PTT button of earset and then have some talks.
- [N] LED lights up at blue color.
- 3) Release PTT button of earset to hear.
- When PTT released, device is ready to receive.